



## Status Board Functions

The status board transmits the various statuses information from the driver to the main office.

A certain status is assigned to every key. By key selection, the driver informs the main office of the current status. For example: start, departure, loading, waiting time, etc.

If a status remains for one hour, the last selected key will blink. This signals the driver to reselect the key (in case the status change had been overlooked). The blinking of a key doesn't change the transmission from data to the main office.

The **GPSeye™** with the status board has to be connected on permanent plus, in order to enable the status transmission even if the vehicle is not moving (e. g. during waiting times).

Press the key combination blue and yellow (simultaneously) to reset the status board, alternatively left lower and right upper key.

Information as per January 2010